



© 2017

PSLV 1:96 Scale Instruction Manual



Stages

4



 
3




2




1

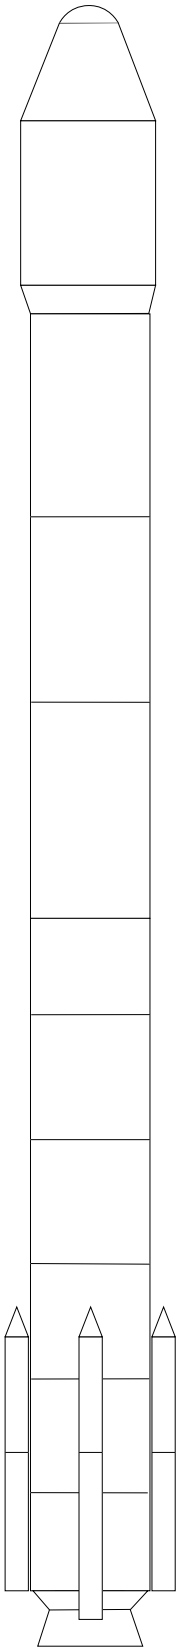

PSLV-CA

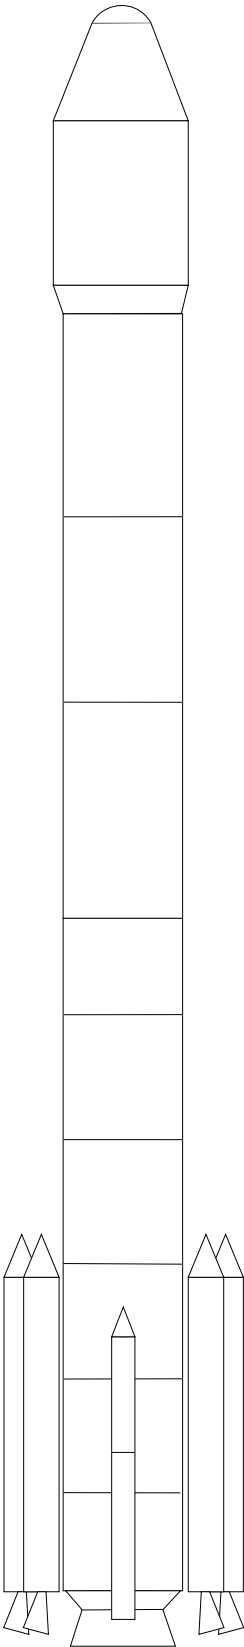 



PSLV-G

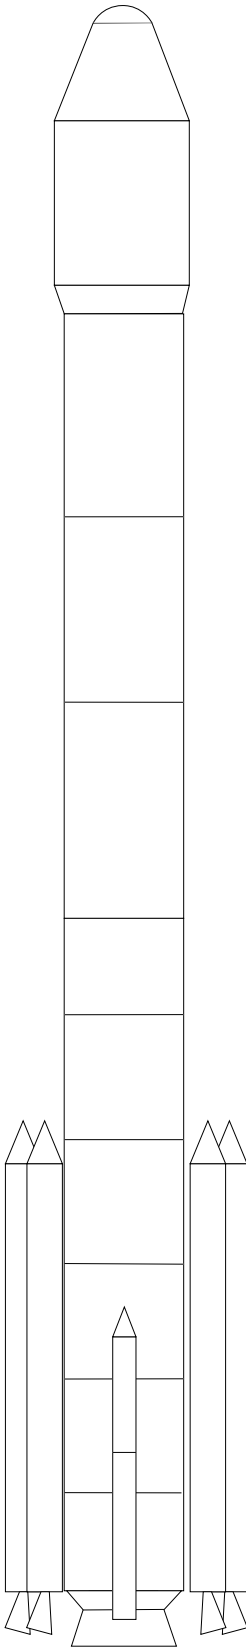 


PSLV-XL



Cutting out the SRB attachment points


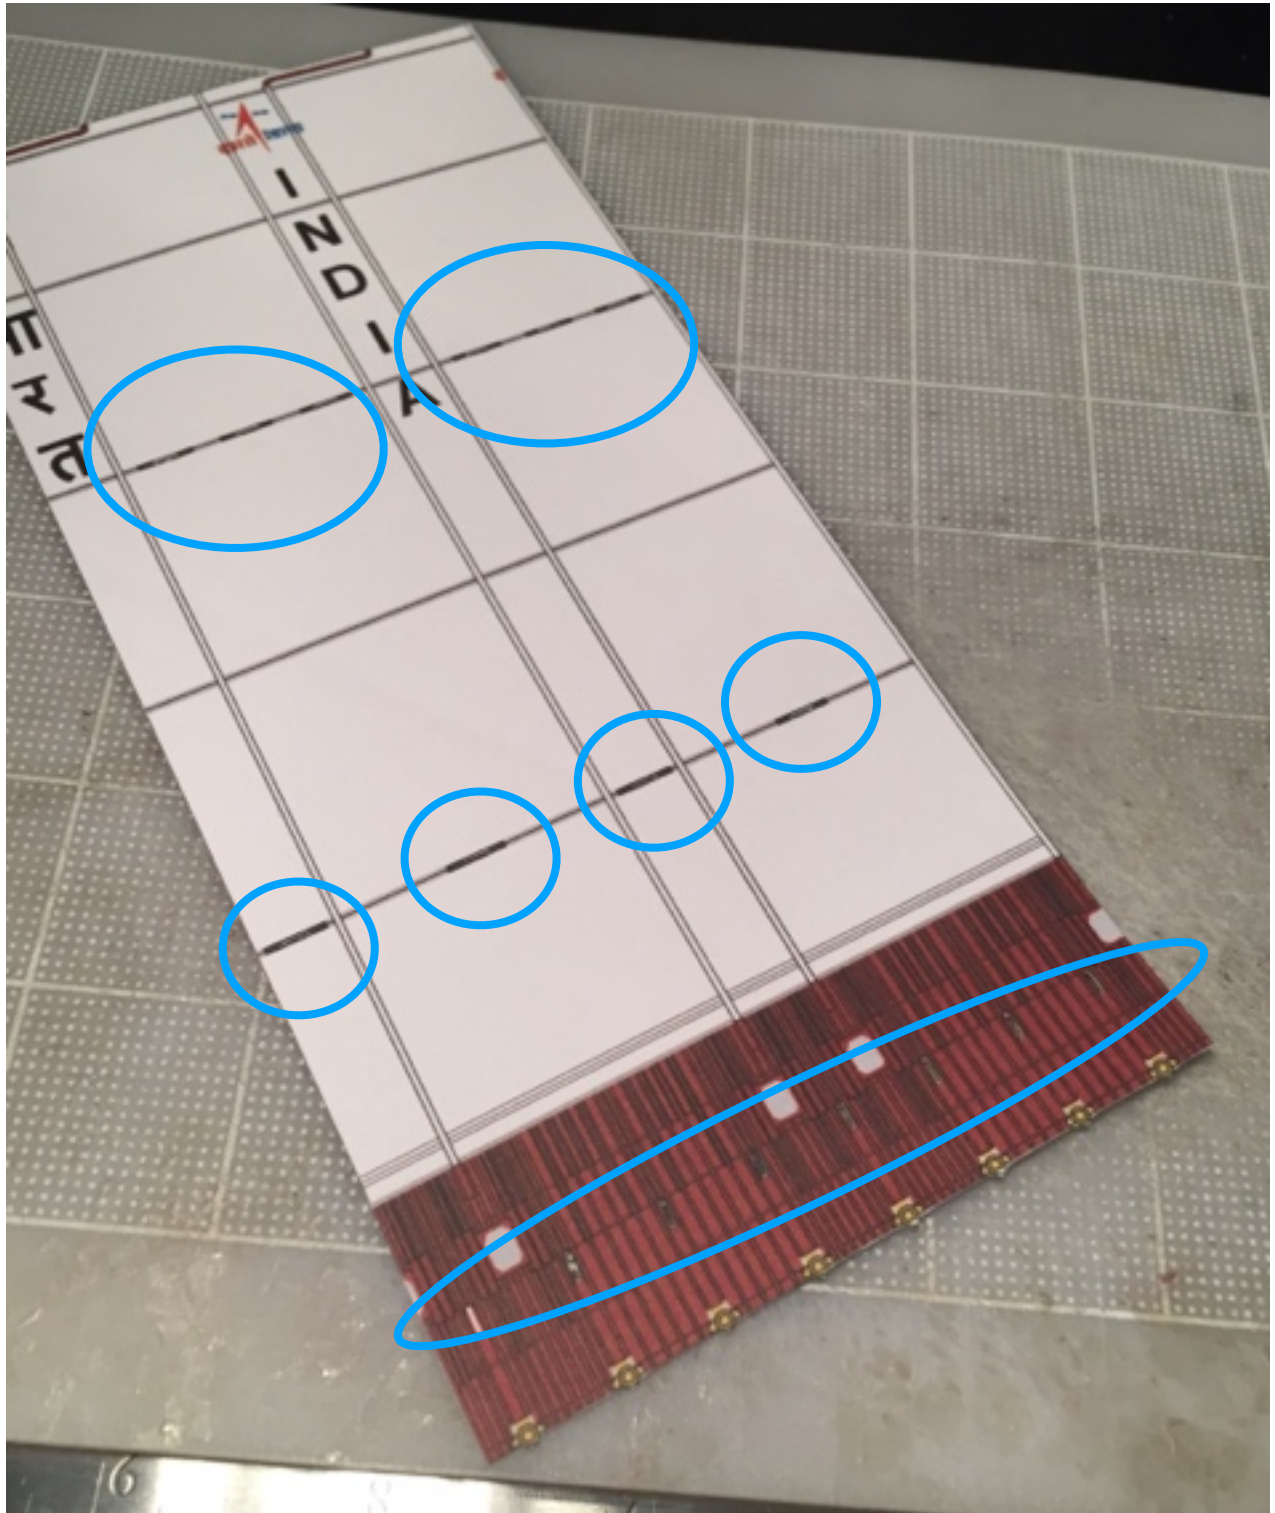



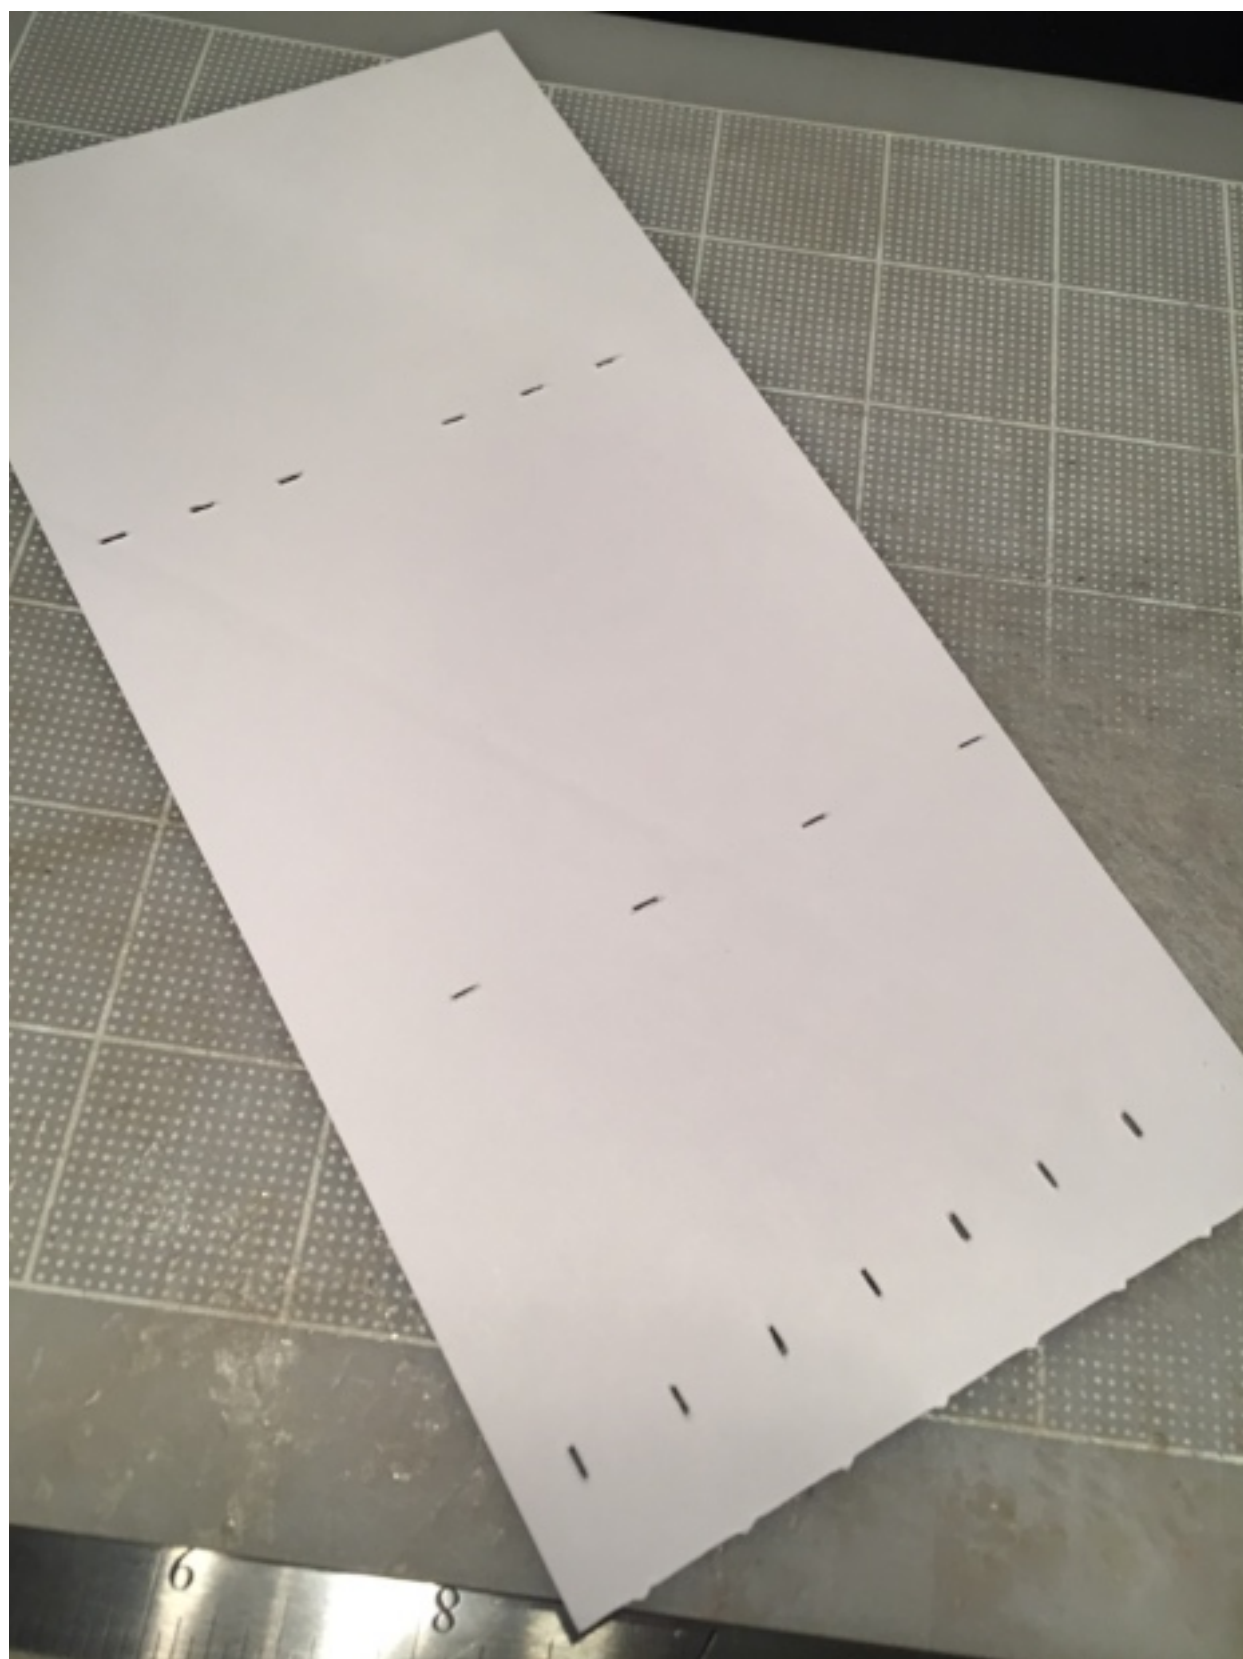


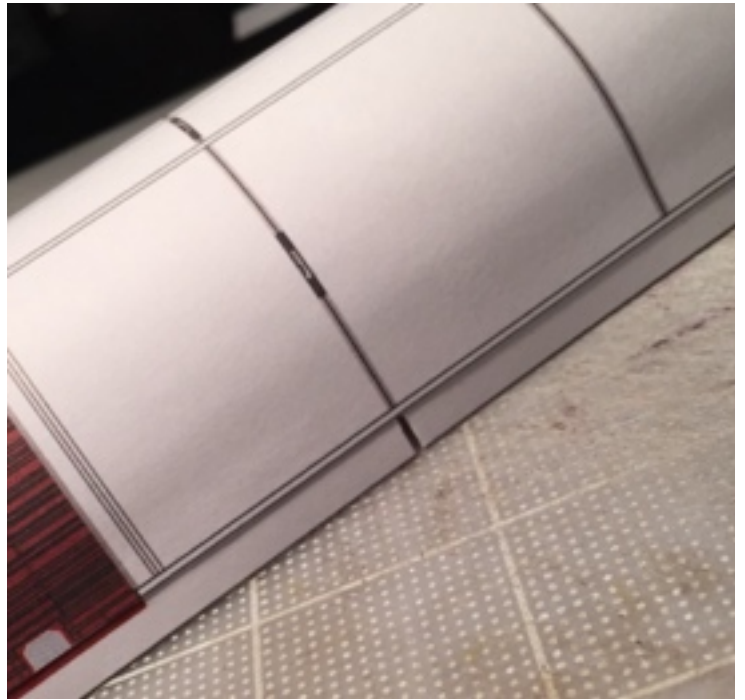



Adding the engine

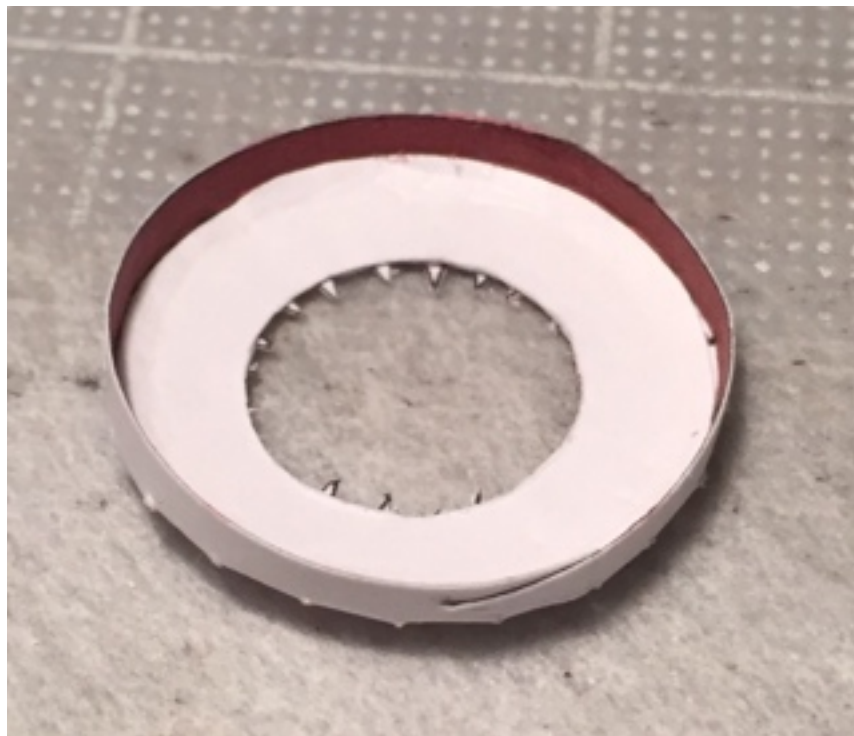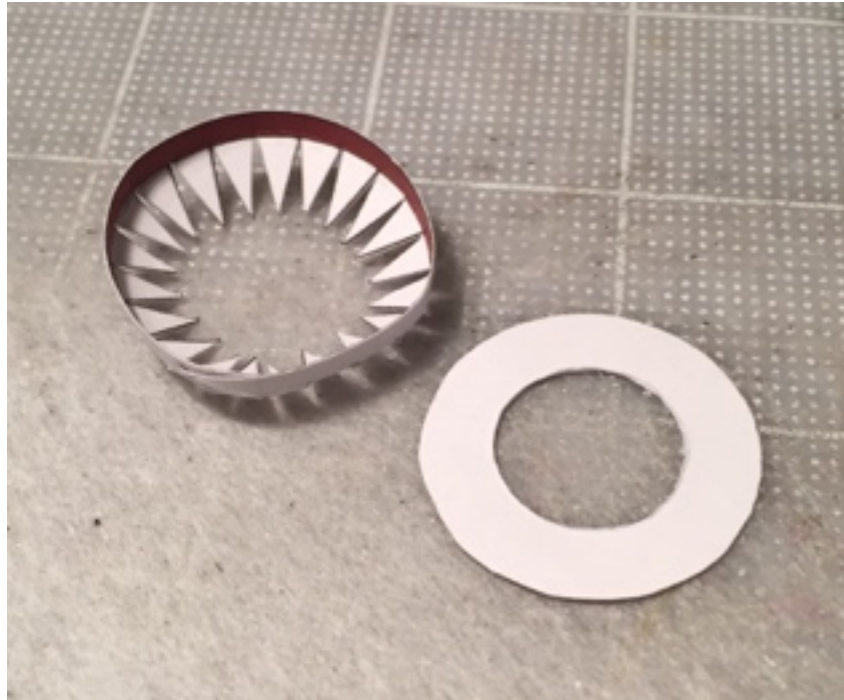

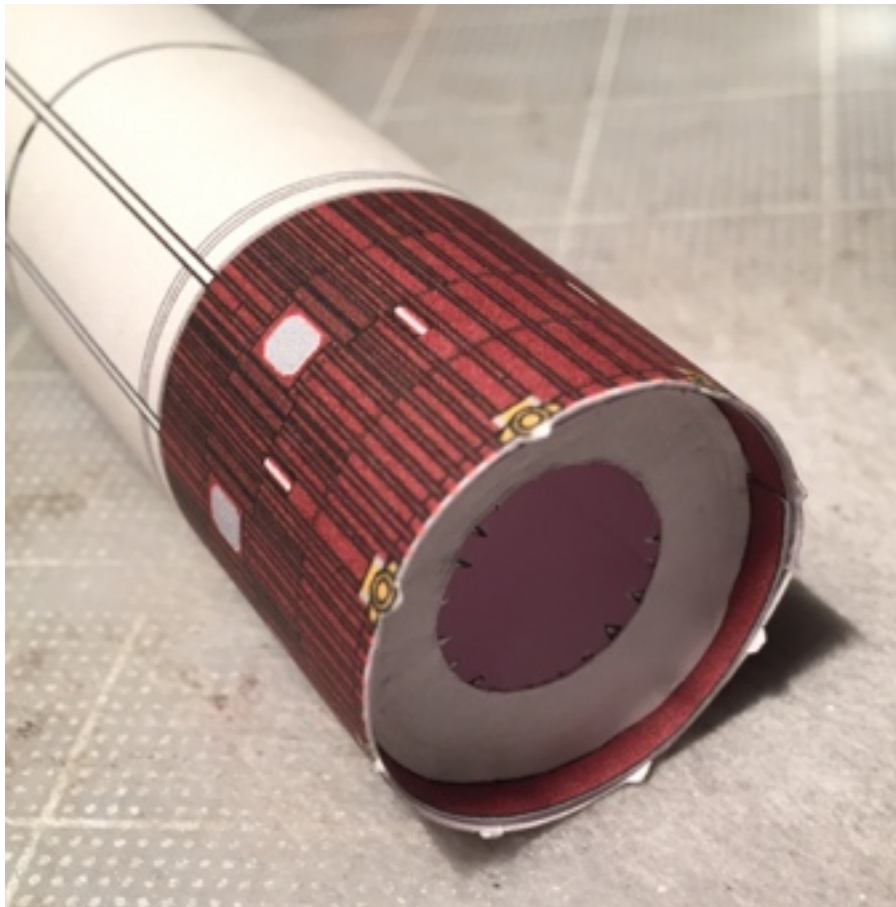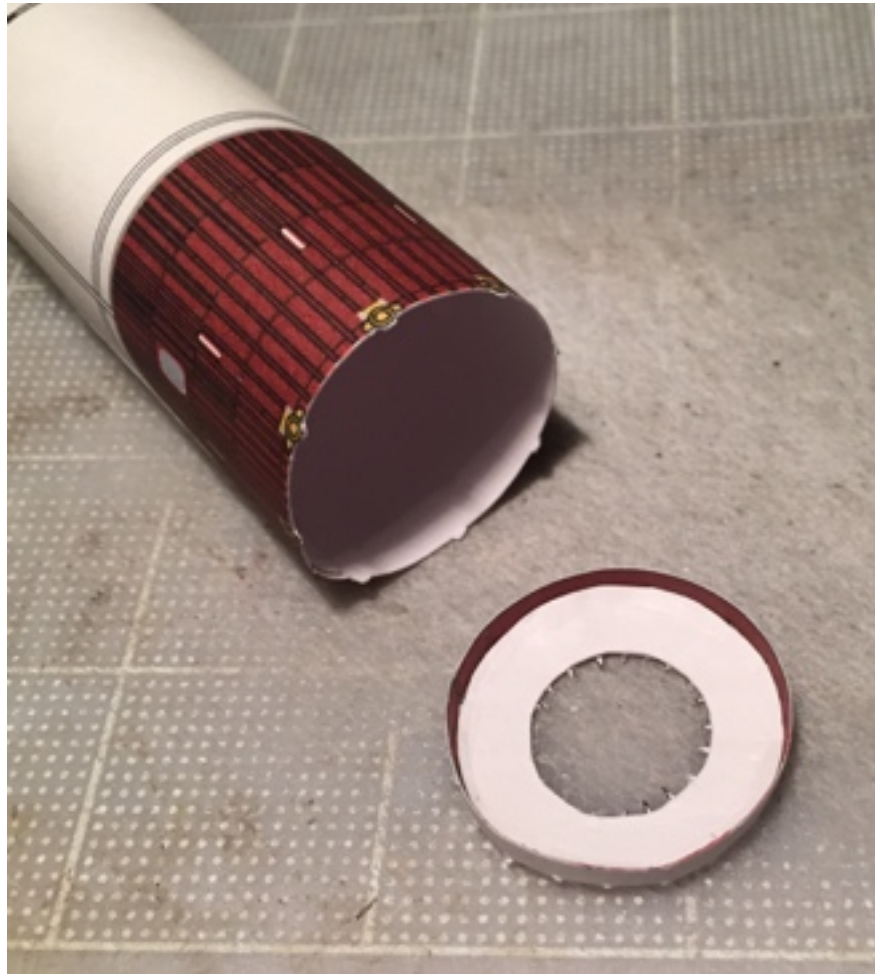


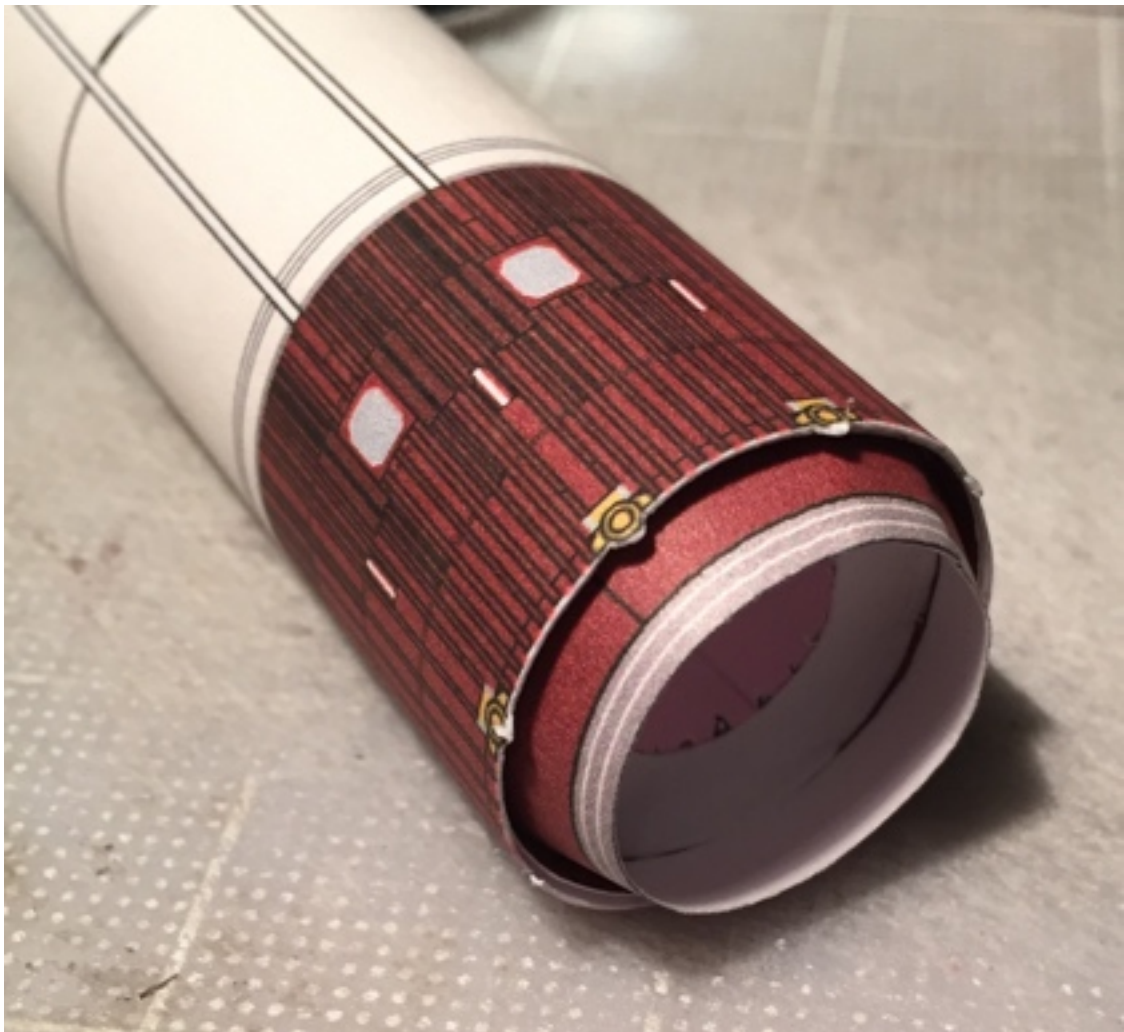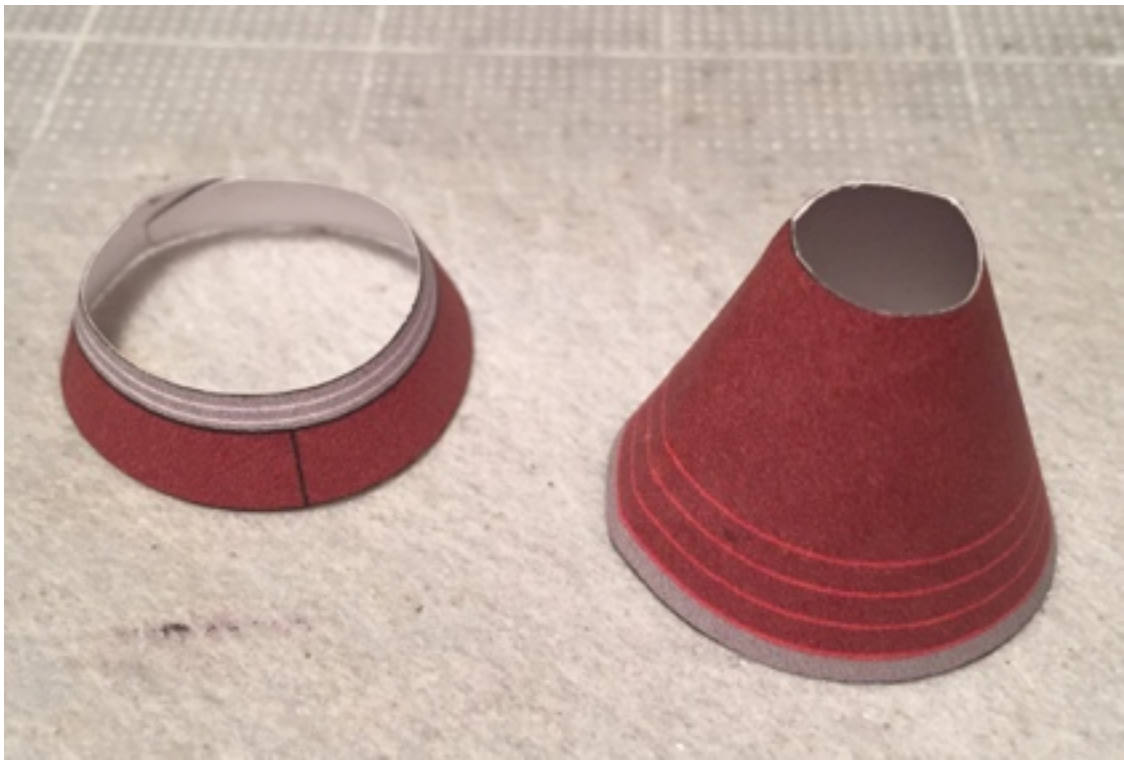





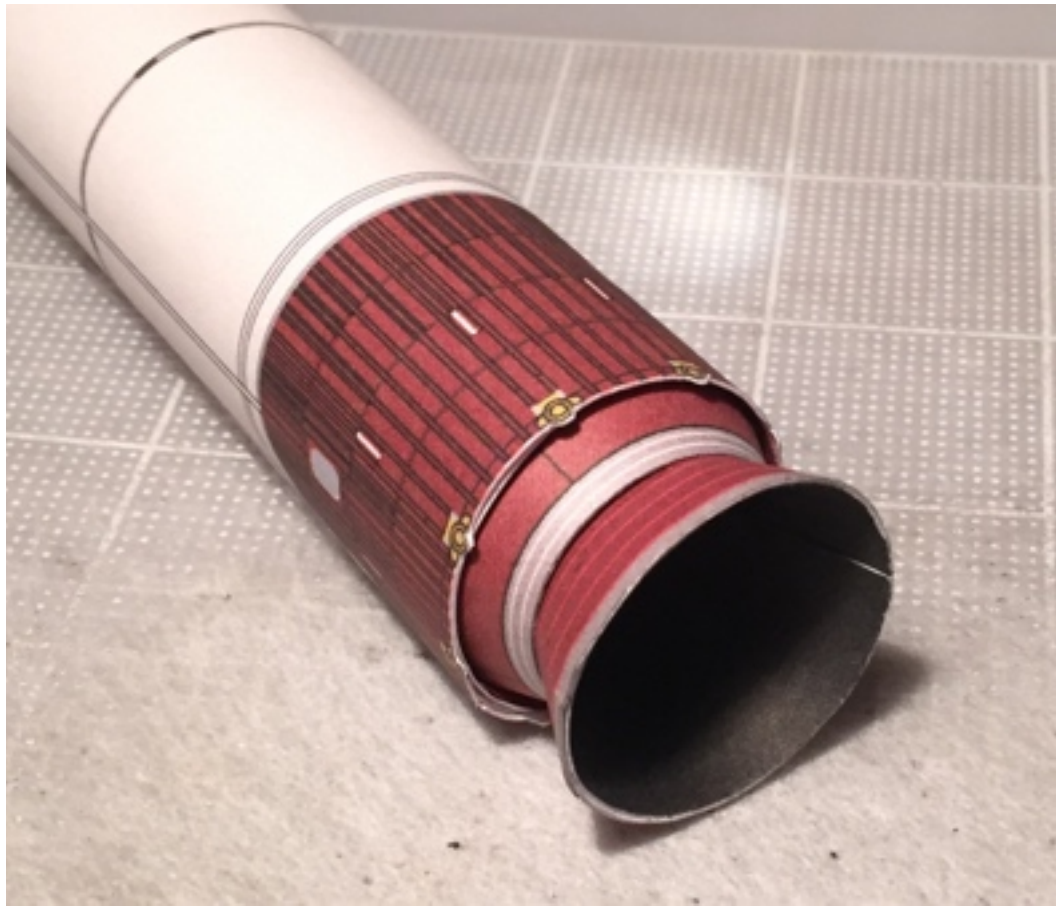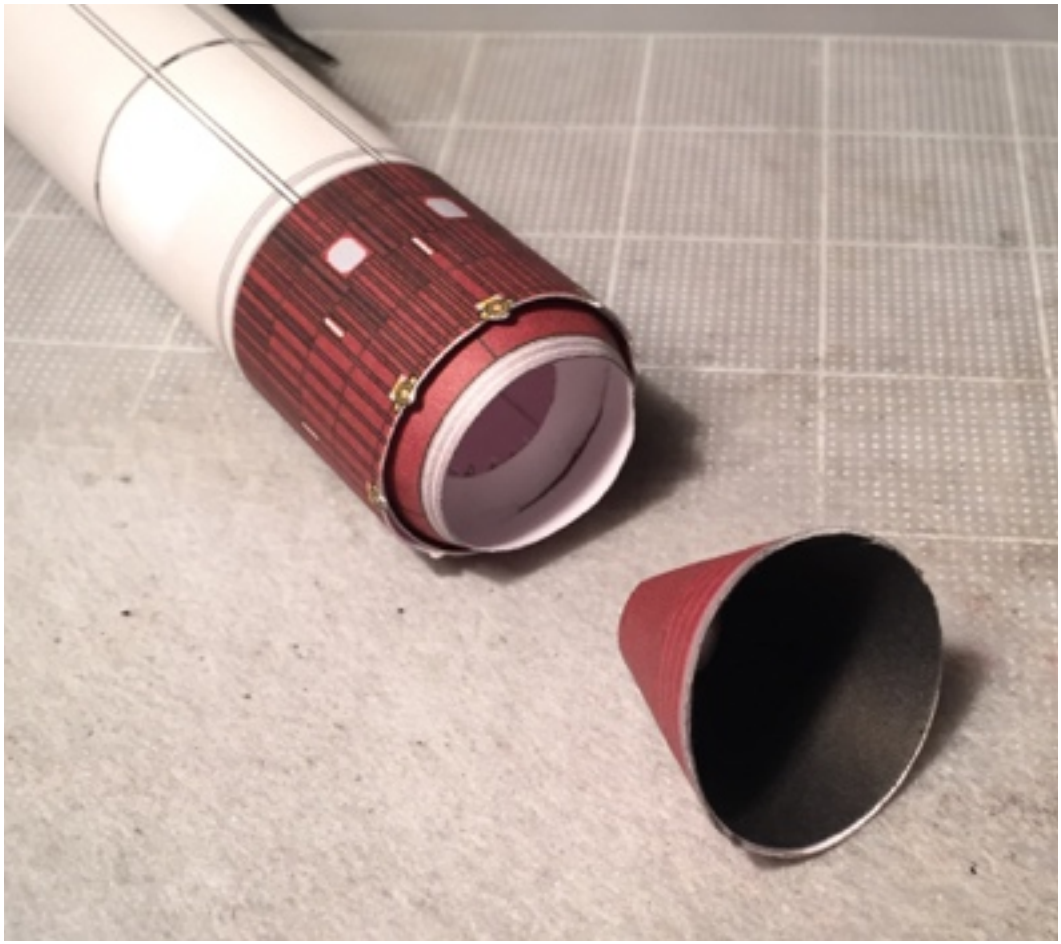

Adding the stages and fairing

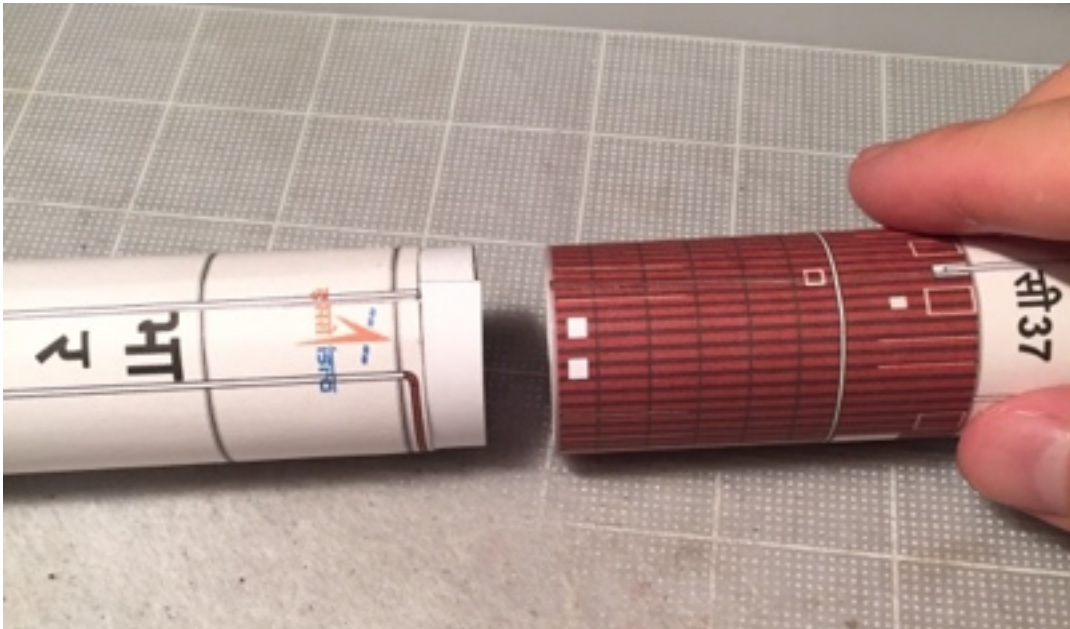


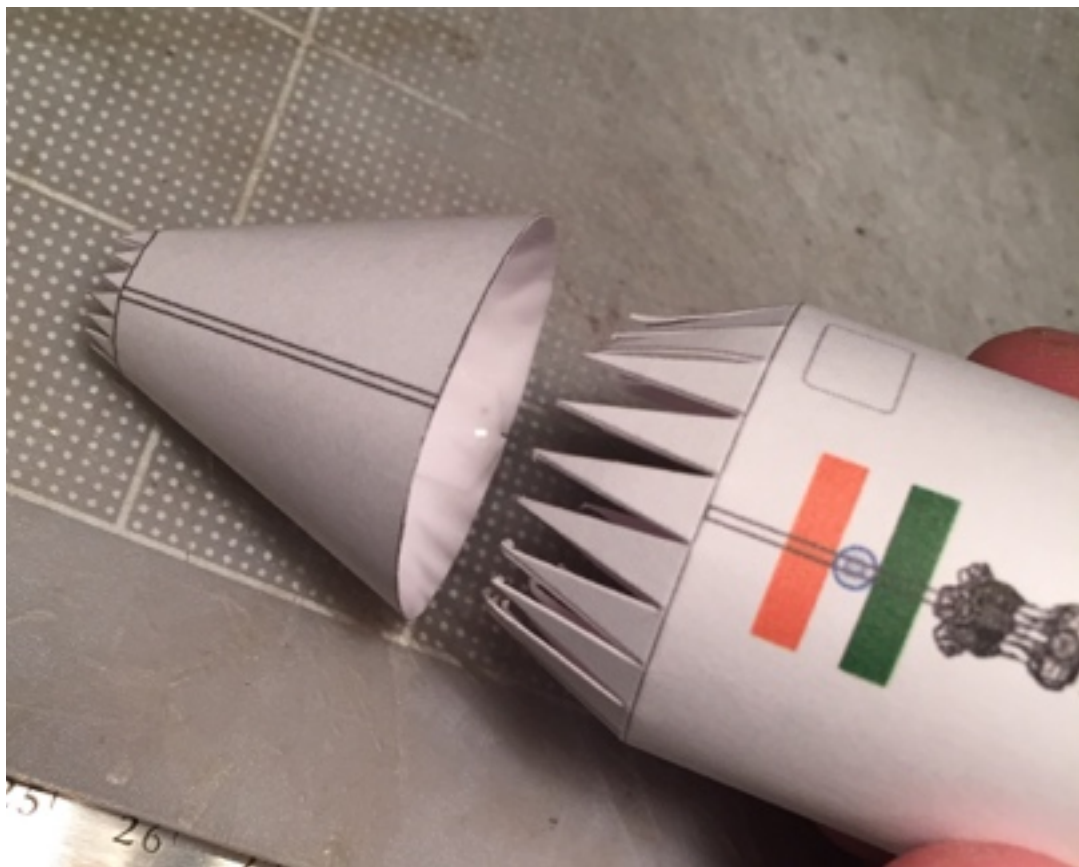

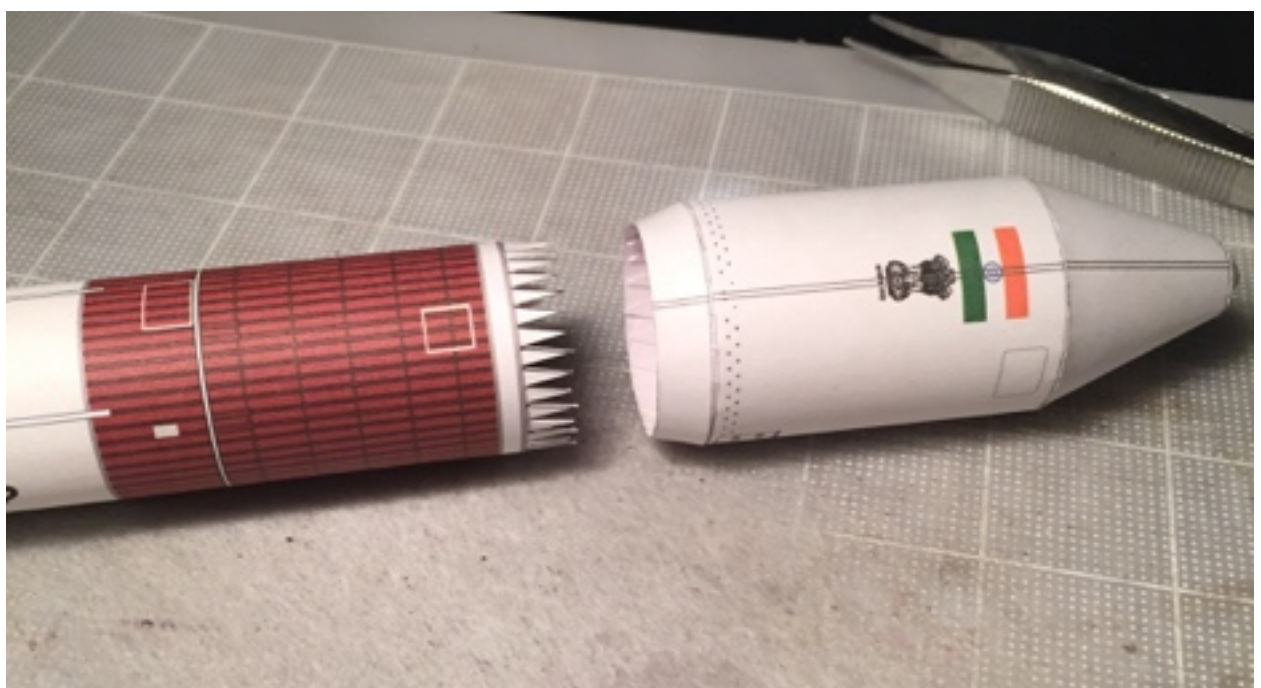



Second stage tanks and reaction control motors

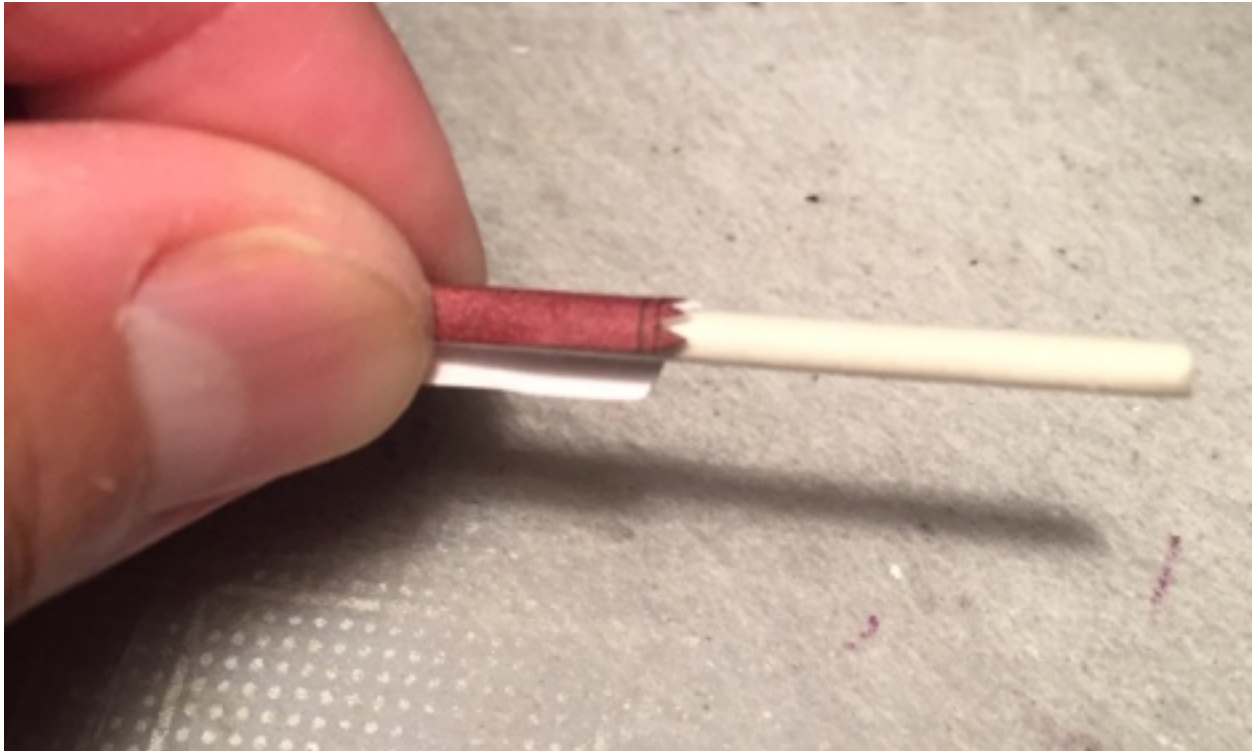





Hot gas reaction control motors (roll control)









Use a thin rod or paper clip to roll these tiny nozzle pieces.
With the aid of a very small tweezer these pieces can be rolled up.









There are two sets of Hot Gas Roll Control Motors. These are placed next to the 2 big white rectangular areas on the second stage.



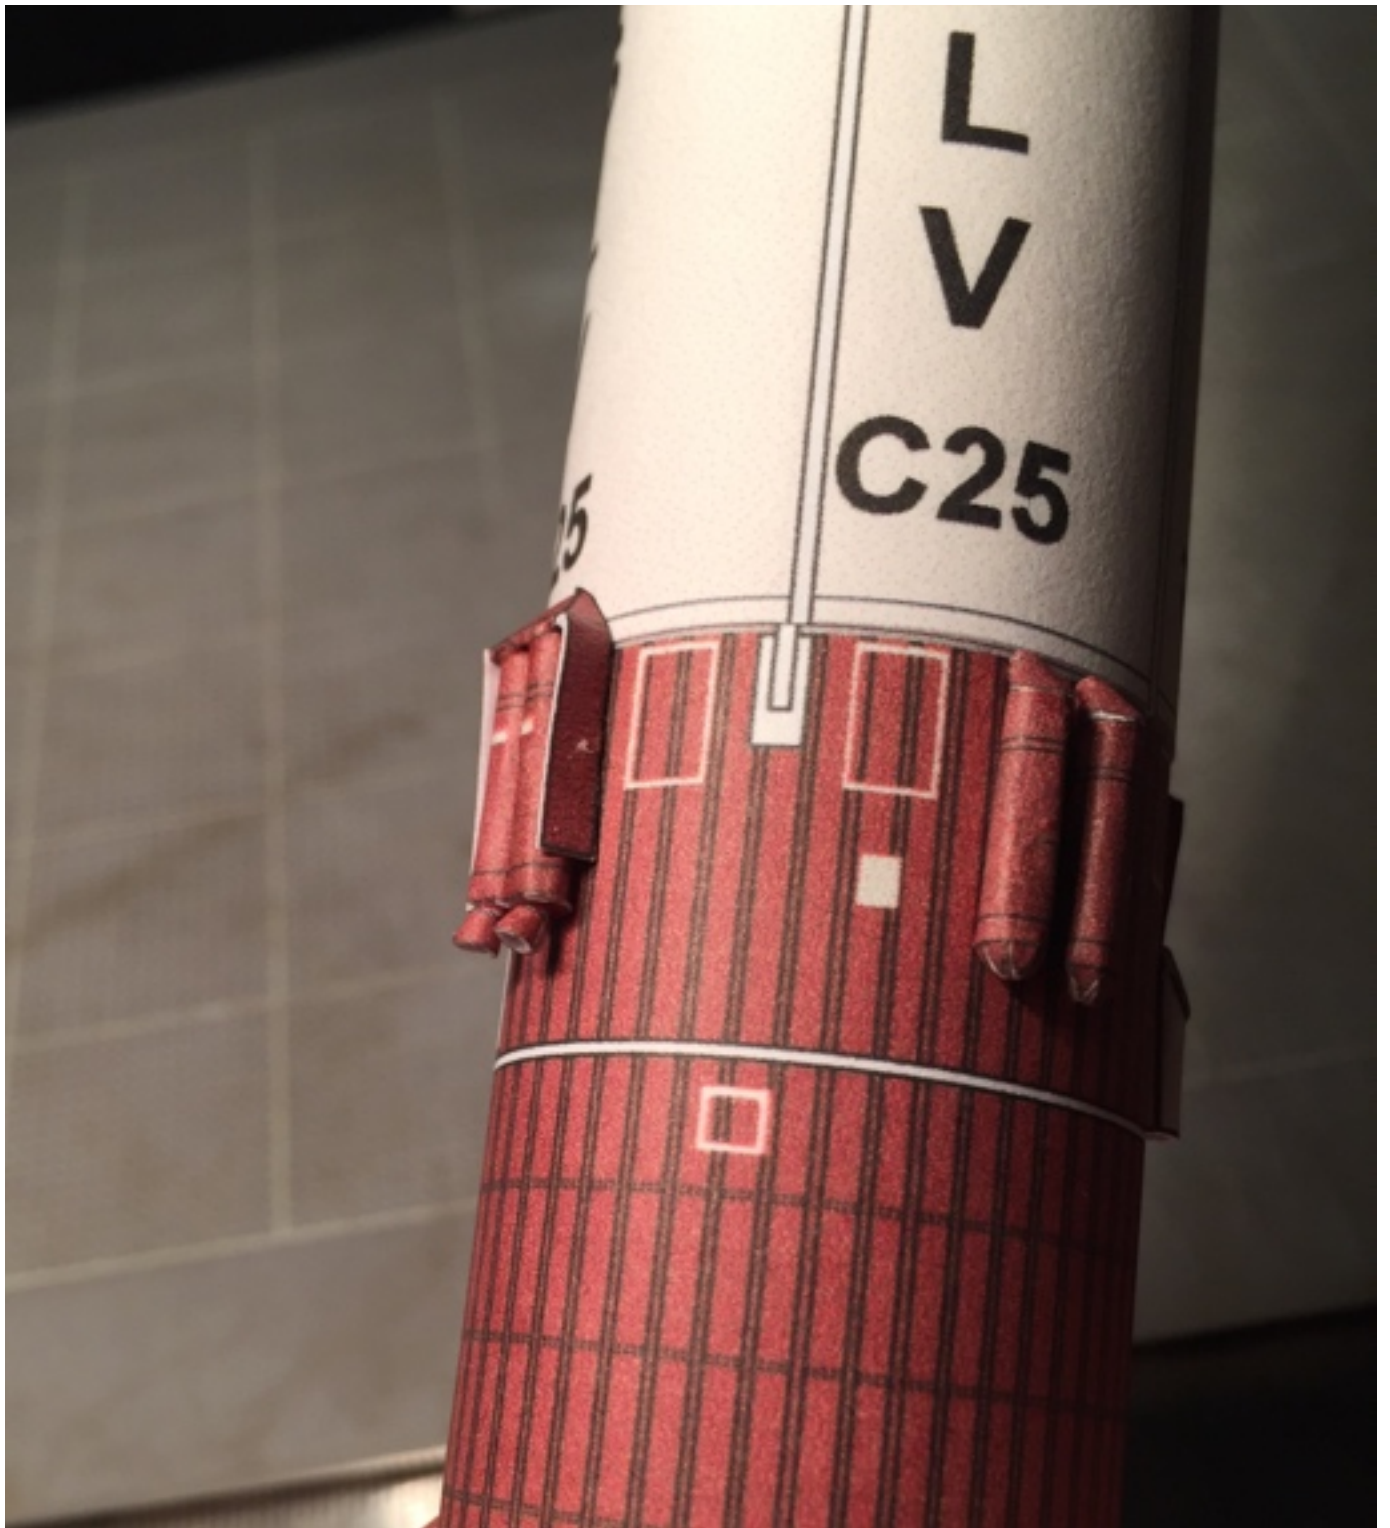






Assembly of the Strap-on Solid boosters

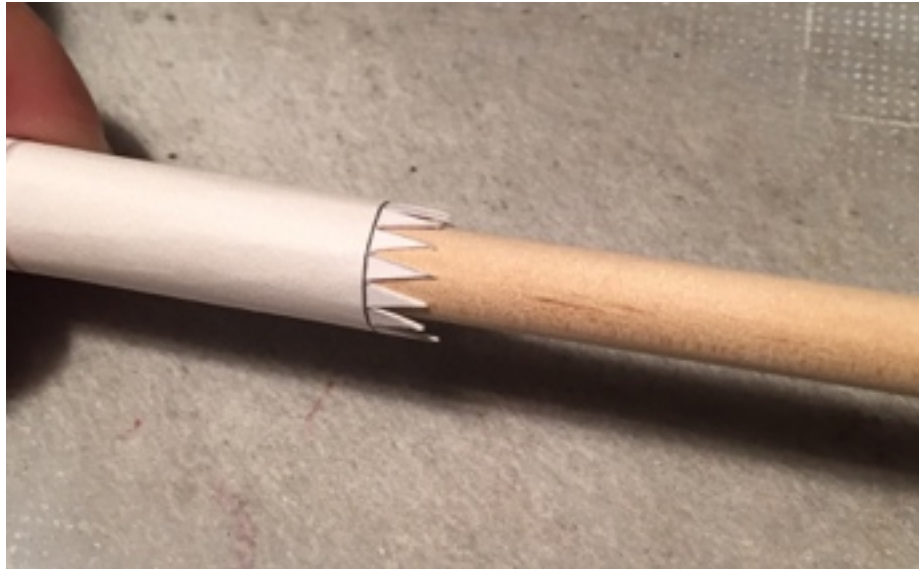







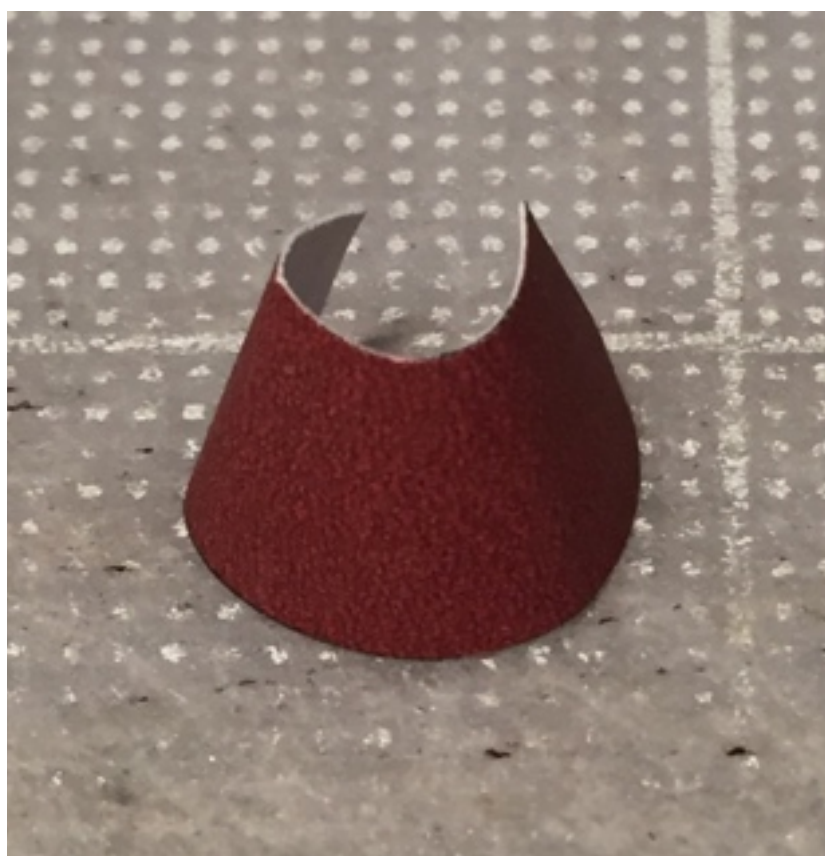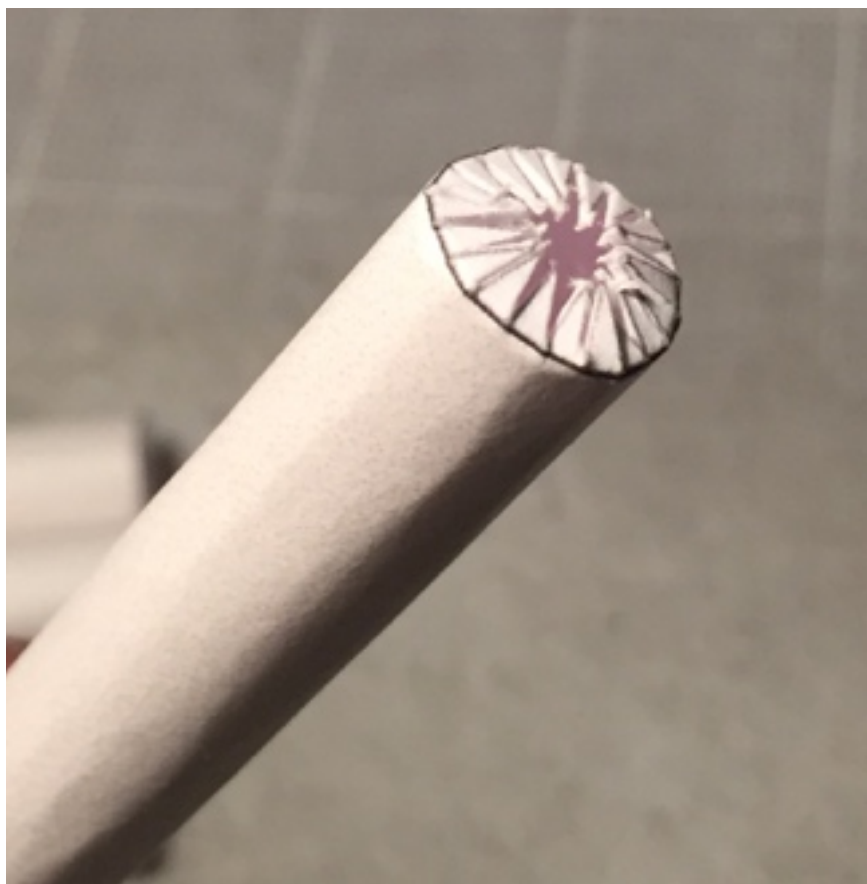


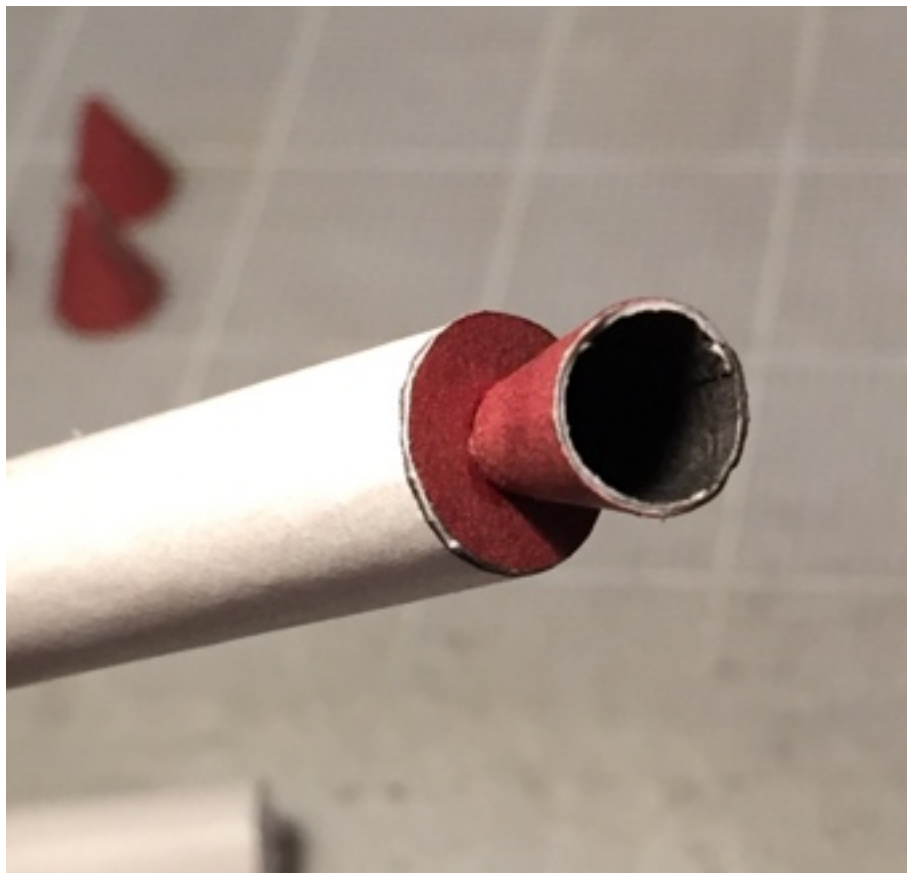    




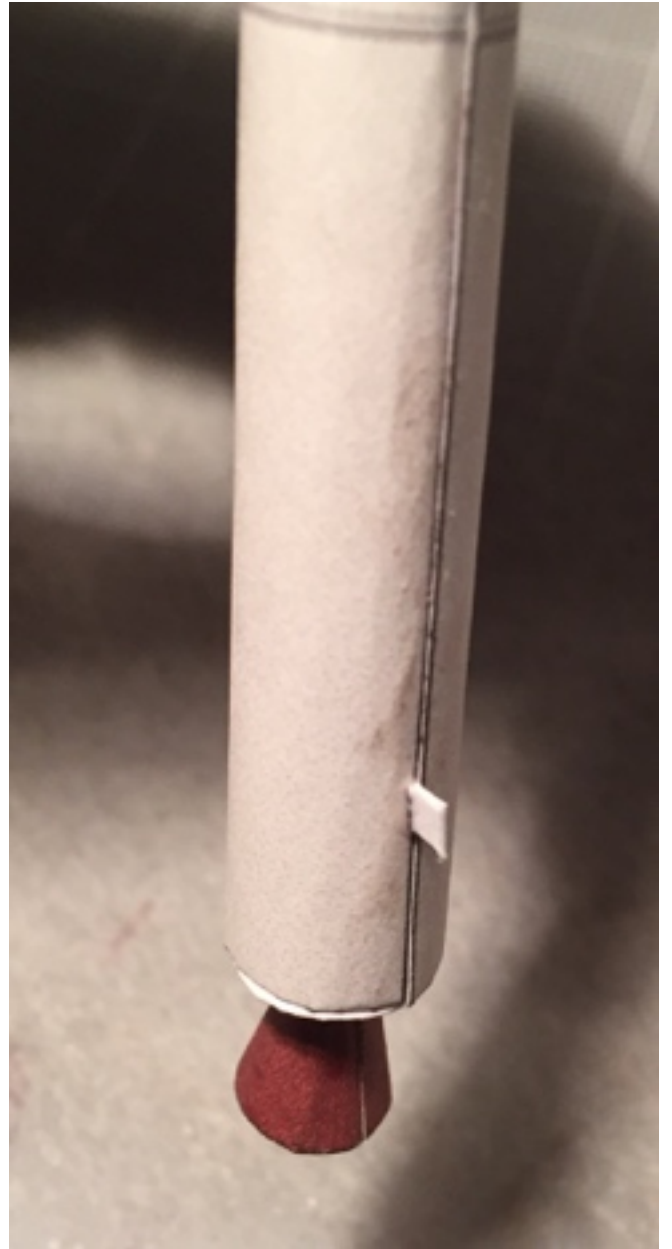

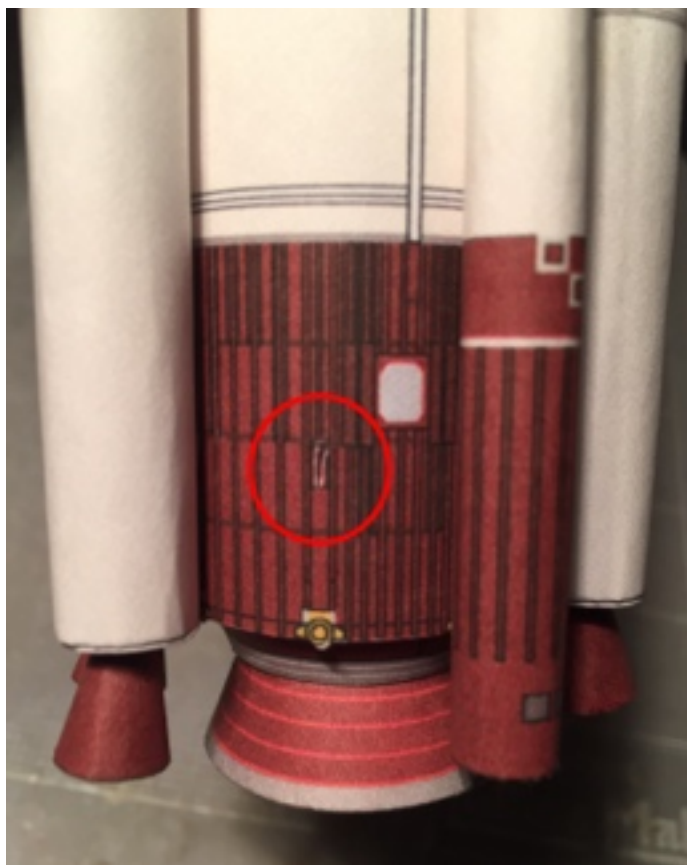 


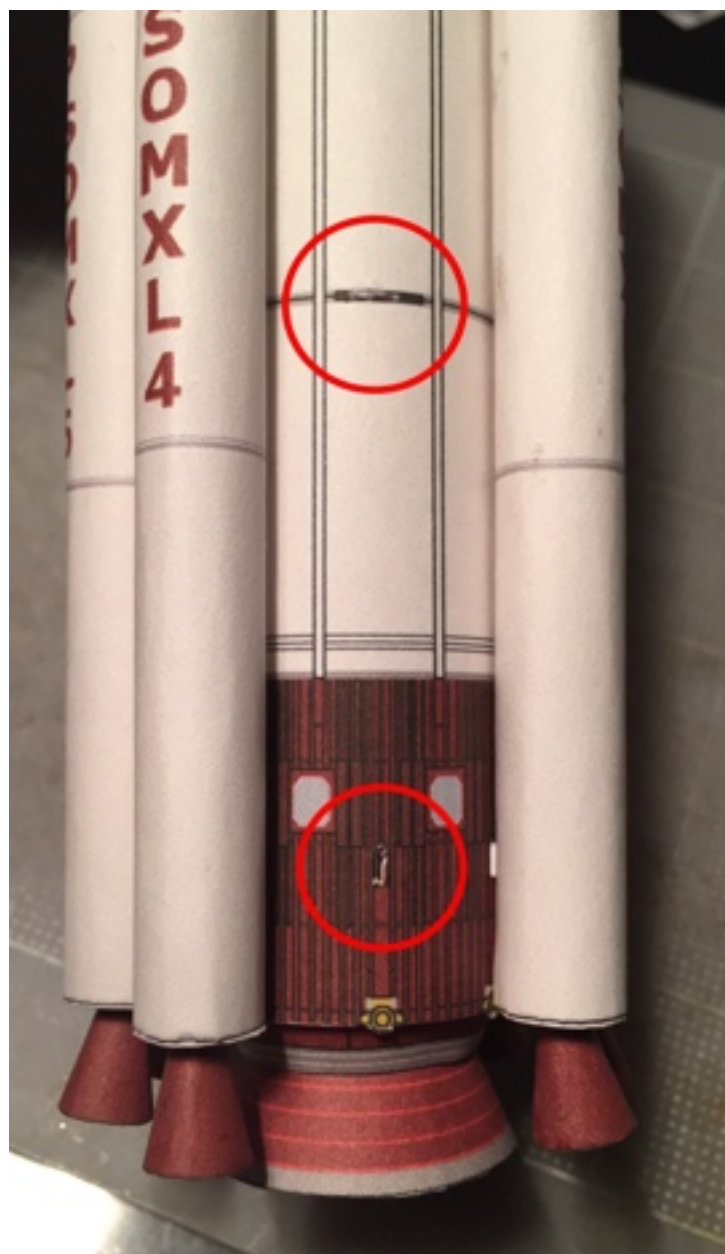 


 
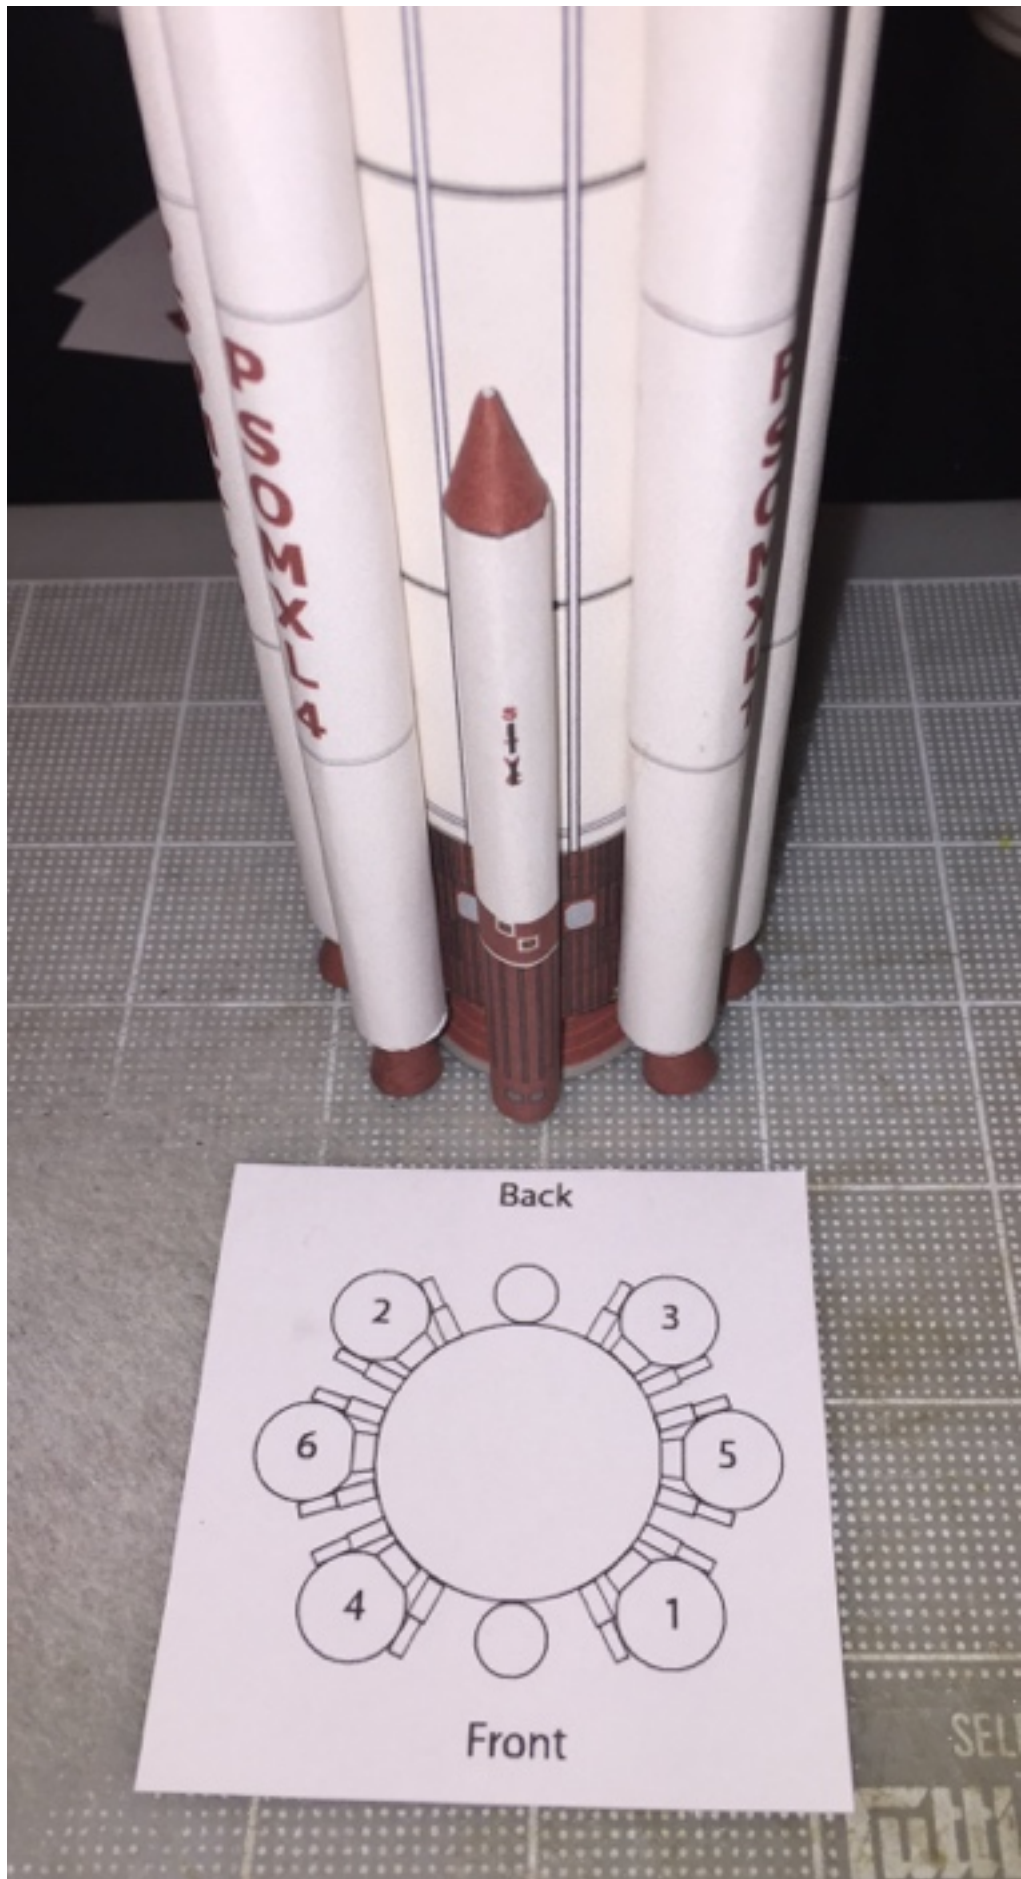 


 




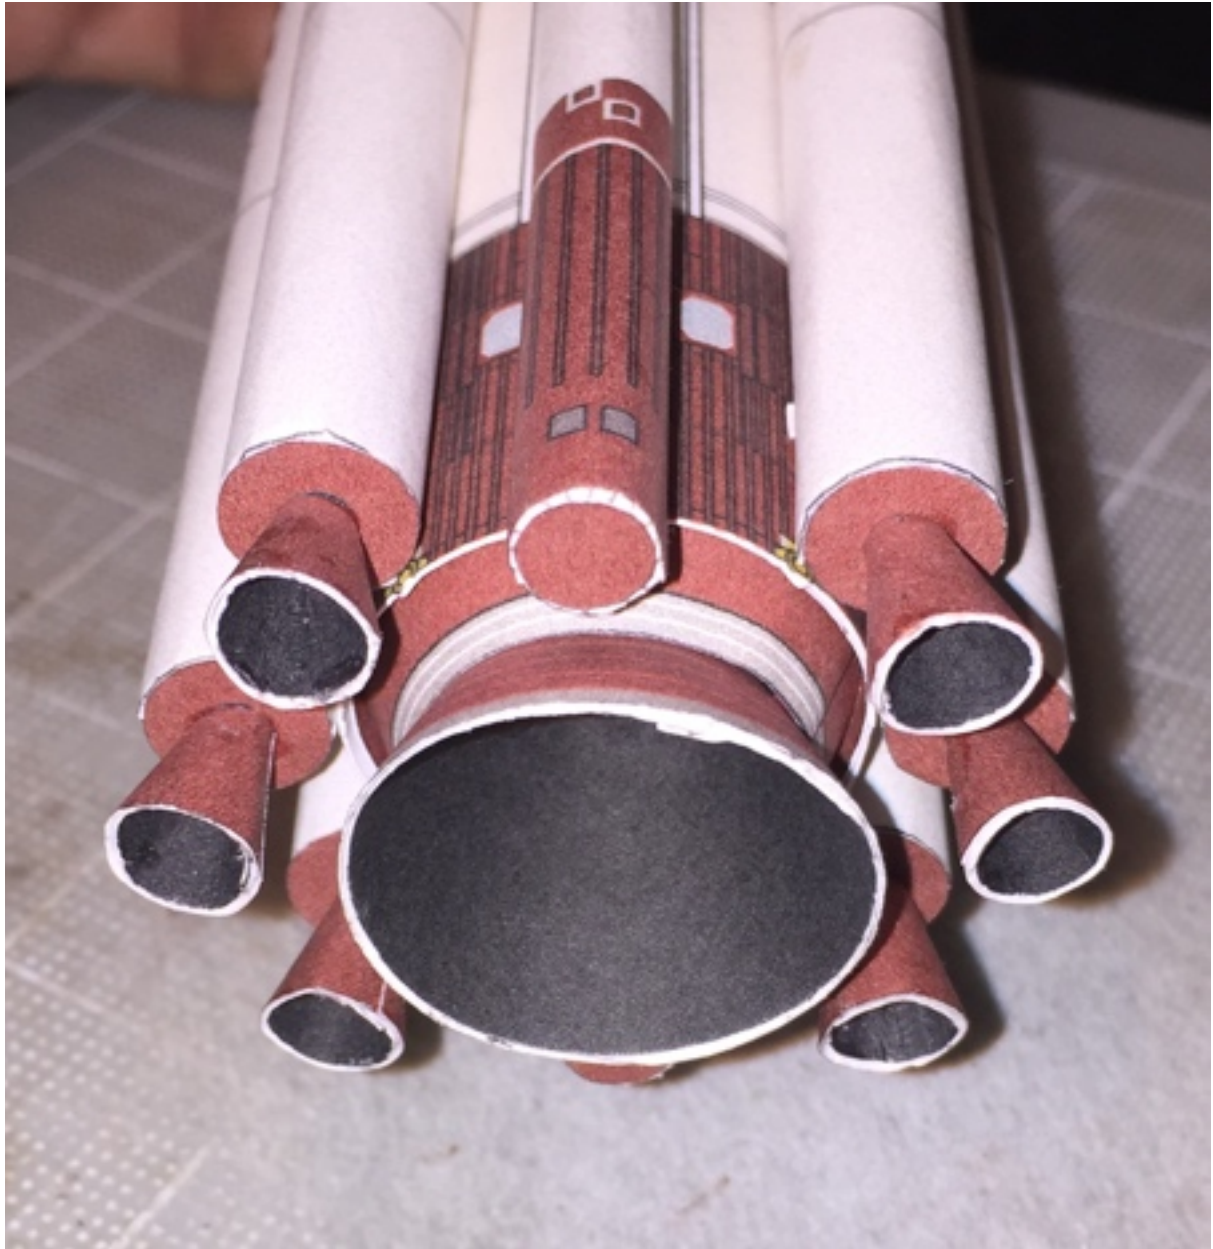

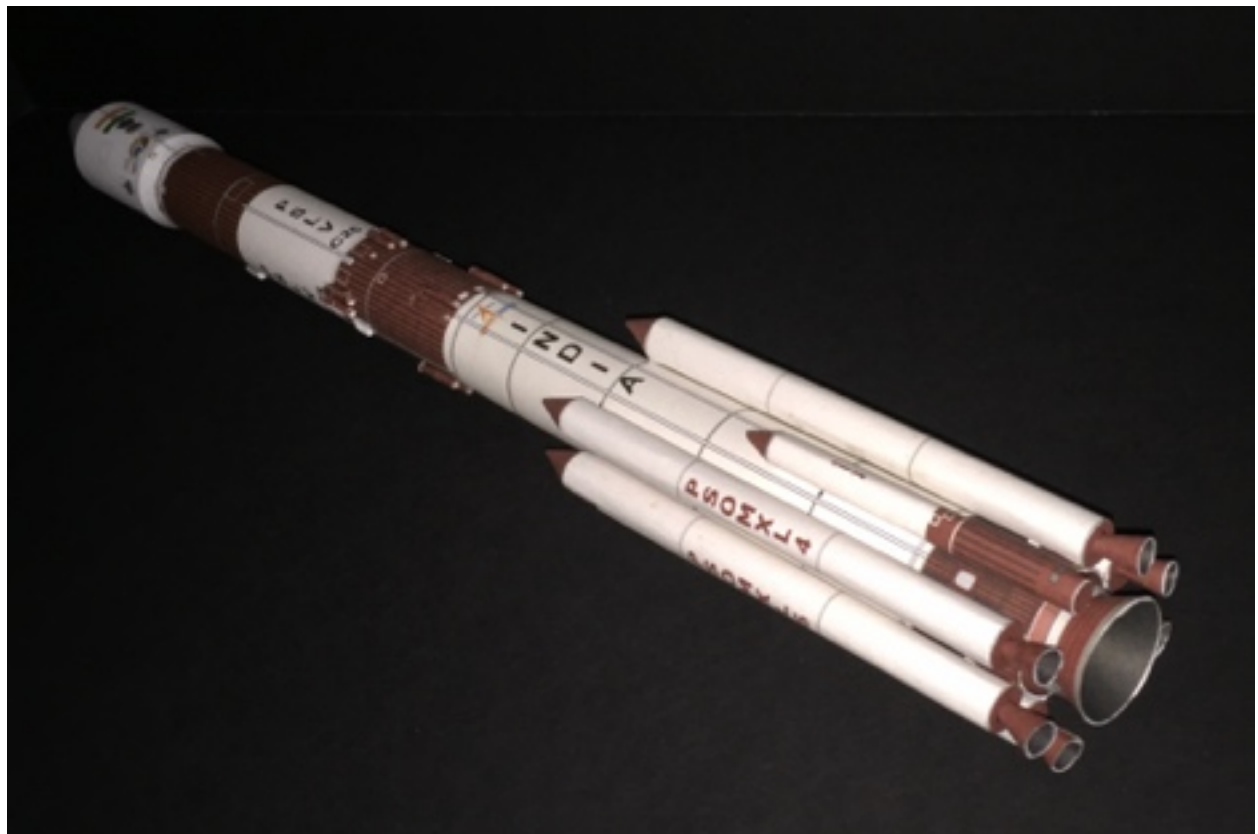

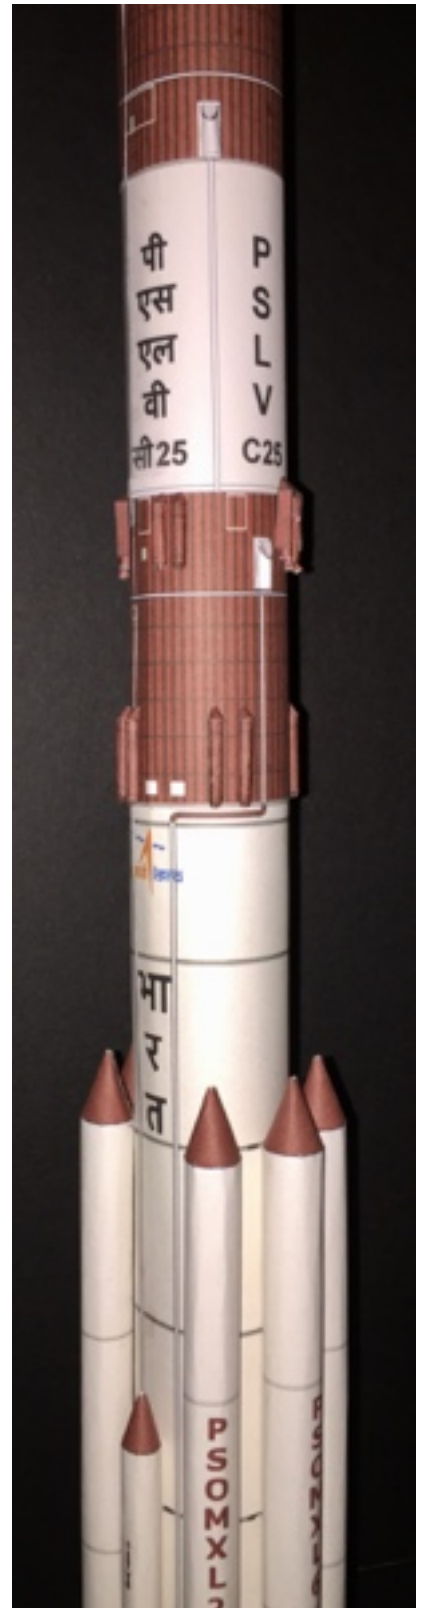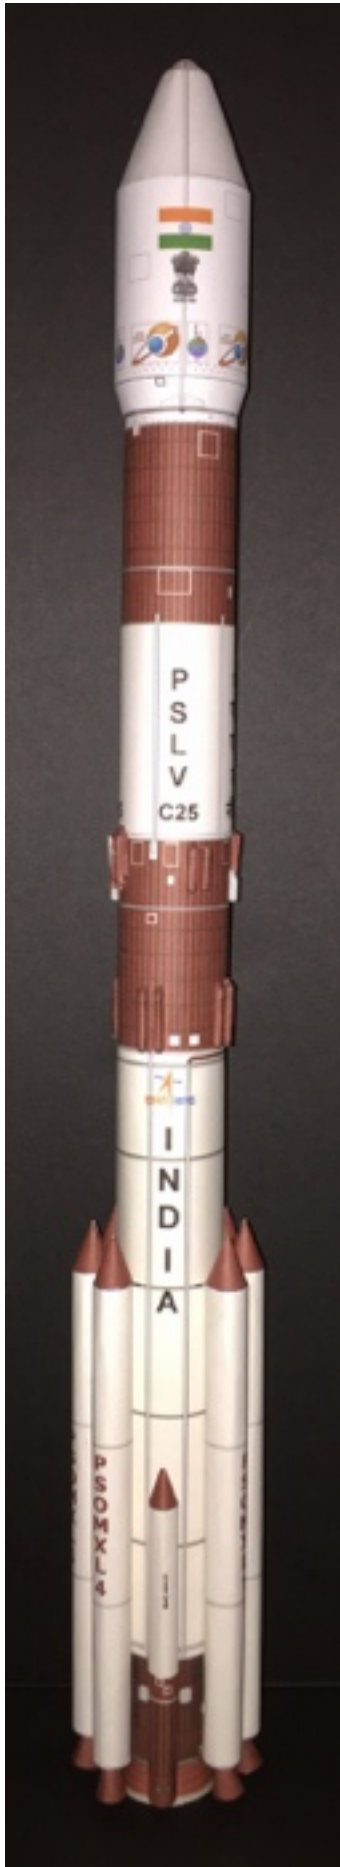

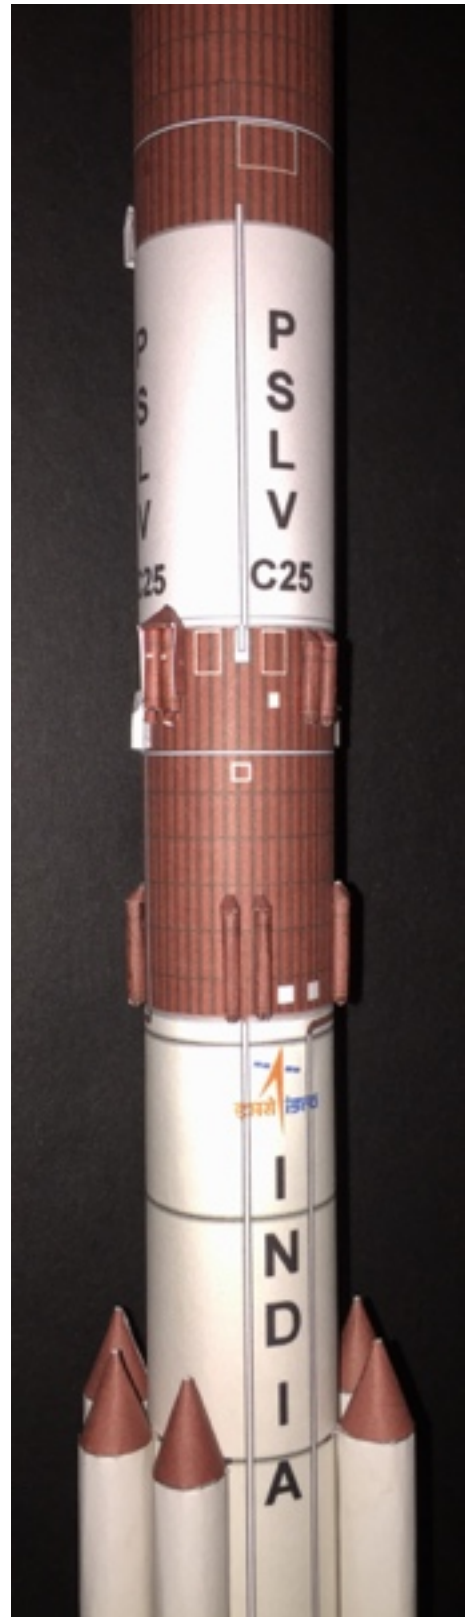

www.axmpaperspacescalemodels.com

ENJOY!!